

Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879
USA Tech Support 800-507-2338 ext. 114



S90-4-38-23-042-01

CHEVROLET COLORADO & GMC CANYON PRO SPACER

Notes

38.1mm Spacer / PCD 6X139.7mm / HUB 78.1mm

Kit Contents

Description	Part Number	Quantity
COLORADO/CANYON WHEEL SPACER	S90-4-38-23-042-01	2
LUG NUT M14-1.5	H77125200	12

Installation Notes

Read all instructions before beginning installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.
- Never use impact wrenches or impact guns to install or remove shock absorber piston components, shafts and Piston rod nuts.
- After Installation, inspect and adjust the following: Wheel Alignment; tire/wheel fender clearance when using aftermarket wheels or tires; brake line clearance and attachments; anti-lock-brake system sensors.


Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879
USA Tech Support 800-507-2338 ext. 114



Torque Pattern

6 Lug Torque Pattern

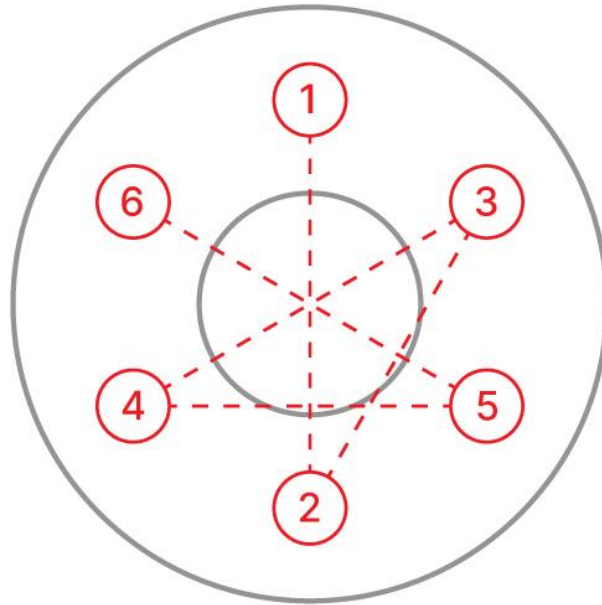

Notes

- Torque Spacer and wheel to 140lbs. Ensure to follow the proper torque pattern sequence.